

**CAUTION:** To prevent electrical shock, turn off electricity and check your local electrical code and regulations. Consult a qualified electrician before installing.

1. Using saw, cut out 128mm round (5" round) hole in ceiling.




2. Connect Line Voltage (120/240V) to the AC input (black & white wire) of the Driver.




3. Place the Driver on top of ceiling.



4. Connect TD26 to the Driver via the connectors.

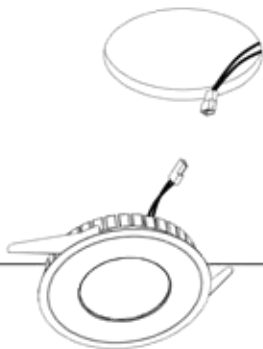

5. Insert TD26 into the ceiling cutout by rotating clock-wise to lock clips into position.

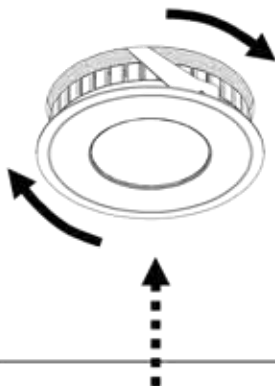

6. Turn power back on. LED is on!

